

Systems	Sys. Info.	Read-Clear Dtc	Data stream	Actuation	Special functions	Others
ROVER ROEWE 550						
Engine Management 1.8T	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Reset adaptions	
Engine Control Module 1.8 VCT	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Reset adaptions	
Automatic Gearbox	<i>Info</i>	<i>err. code</i>	<i>data</i>		1.Reset adaptions	
ABS	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.ABS Modulator Bleed Process	
SRS	<i>Info</i>	<i>err. code</i>				
Digital Instrument Pack	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Set Odometer Offset 2.Service Interval Reset 3.Instrument Pack Self Test	
Body Control Module	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Set power mode	
Electric Windows		<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
Central Locking		<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
Wipers and Washers		<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
Interior and Exterior Lights		<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
Security and Immobilisation		<i>err. code</i>	<i>data</i>			
Navigation System	<i>Info</i>	<i>err. code</i>		<i>Actuat.</i>	1.Colour Screen Self Test	
HEVAC	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
ESCL	<i>Info</i>	<i>err. code</i>	<i>data</i>			
ICE	<i>Info</i>	<i>err. code</i>				
Park Distance Control	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
Rain Sensor	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
Electronic Temperature Control	<i>Info</i>	<i>err. code</i>	<i>data</i>			
ROVER ROEWE 750						
Engine Management 1.8T	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Reset adaptions	
Engine Management KV6	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
Automatic Gearbox	<i>Info</i>	<i>err. code</i>	<i>data</i>		1.Reset adaptions	
ABS	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Brake deflation procedures 2.Car Brake deflation	
SRS	<i>Info</i>	<i>err. code</i>			1.Activate / disable collision detection	
Instrument Pack	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Service Interval Reset	
Electric Windows	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
Wipers and Washers	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
Climate Control	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
Rain Sensor	<i>Info</i>	<i>err. code</i>	<i>data</i>			

Exterior Lights	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
Memory Seats	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
Sunroof	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
Manual Air Conditioning	<i>Info</i>	<i>err. code</i>	<i>data</i>			
Heated Rear Window	<i>Info</i>	<i>err. code</i>	<i>data</i>			
Interior Lights	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
Security	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
GIM		<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		

ROVER MG3

Engine Management System (MEMS)	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Set Idle Speed Offset 2.Immobilizer synchronization 3.Set ignition offset	
ABS 8	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Diagnostic speed limit 2.throttle relay	
Automatic Gearbox (CVT)		<i>err. code</i>	<i>data</i>			
Airbag Control Unit	<i>Info</i>	<i>err. code</i>	<i>data</i>			

ROVER MG6

Engine Management 1.8T	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Reset adaptions	
Engine Control Module 1.8	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Reset adaptions	
Automatic Gearbox	<i>Info</i>	<i>err. code</i>	<i>data</i>		1.Reset adaptions	
ABS	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.ABS Modulator Bleed Process	
SRS	<i>Info</i>	<i>err. code</i>				
Digital Instrument Pack	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Set Odometer Offset 2.Service Interval Reset 3.Instrument Pack Self Test	
Body Control Module	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Set power mode	
Electric Windows		<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
Central Locking		<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
Wipers and Washers		<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
Interior and Exterior Lights		<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
Security and Immobilisation		<i>err. code</i>	<i>data</i>			
Navigation System	<i>Info</i>	<i>err. code</i>		<i>Actuat.</i>	1.Colour Screen Self Test	
HEVAC	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
ESCL	<i>Info</i>	<i>err. code</i>	<i>data</i>			
ICE		<i>err. code</i>				
Park Distance Control	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
Rain Sensor	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		

Electronic Temperature	Info	err. code	data		
ROVER MG7(2007)					
Engine Management System (MEMS)	Info	err. code	data	Actuat.	1.Set Idle Speed Offset 2.Immobilizer synchronization 3.Set ignition offest
SRS	Info	err. code			1.Activate / disable collision detection
Instrument Pack	Info	err. code	data	Actuat.	1.Service Interval Reset
Electric Windows	Info	err. code	data	Actuat.	
Wipers and Washers	Info	err. code	data	Actuat.	
Climate Control	Info	err. code	data	Actuat.	
Rain Sensor	Info	err. code	data		
Exterior Lights	Info	err. code	data	Actuat.	
Memory Seats	Info	err. code	data	Actuat.	
Sunroof	Info	err. code	data	Actuat.	
Manual Air Conditioning	Info	err. code	data		
Heated Rear Window	Info	err. code	data		
Interior Lights	Info	err. code	data	Actuat.	
Security	Info	err. code	data	Actuat.	
ROVER MG7(2008)					
Engine Management 1.8T	Info	err. code	data	Actuat.	1.Reset adaptions
Engine Management KV6	Info	err. code	data	Actuat.	
SRS	Info	err. code			1.Activate / disable collision detection
Instrument Pack	Info	err. code	data	Actuat.	1.Service Interval Reset
Electric Windows	Info	err. code	data	Actuat.	
Wipers and Washers	Info	err. code	data	Actuat.	
Climate Control	Info	err. code	data	Actuat.	
Rain Sensor	Info	err. code	data		
Exterior Lights	Info	err. code	data	Actuat.	
Memory Seats	Info	err. code	data	Actuat.	
Sunroof	Info	err. code	data	Actuat.	
Manual Air Conditioning	Info	err. code	data		
Heated Rear Window	Info	err. code	data		
Interior Lights	Info	err. code	data	Actuat.	
Security	Info	err. code	data	Actuat.	
ROVER MG7(2009)					
Engine Management 1.8T	Info	err. code	data	Actuat.	1.Reset adaptions

Engine Management KV6	Info	err. code	data	Actuat.		
Automatic Gearbox	Info	err. code	data		1.Reset adaptions	
ABS	Info	err. code	data	Actuat.	1.Brake deflation procedures 2.Car Brake deflation	
SRS	Info	err. code			1.Activate / disable collision detection	

ROVER MG7-L

Engine Management KV6	Info	err. code	data	Actuat.		
Automatic Gearbox	Info	err. code	data		1.Reset adaptions	
ABS	Info	err. code	data	Actuat.	1.Brake deflation procedures 2.Car Brake deflation	
SRS	Info	err. code			1.Activate / disable collision detection	
Instrument Pack	Info	err. code	data	Actuat.	1.Service Interval Reset	
Electric Windows	Info	err. code	data	Actuat.		
Wipers and Washers	Info	err. code	data	Actuat.		
Climate Control	Info	err. code	data	Actuat.		
Rain Sensor	Info	err. code	data			
Exterior Lights	Info	err. code	data	Actuat.		
Memory Seats	Info	err. code	data	Actuat.		
Sunroof	Info	err. code	data	Actuat.		
Manual Air Conditioning	Info	err. code	data			
Heated Rear Window	Info	err. code	data			
Interior Lights	Info	err. code	data	Actuat.		
Security	Info	err. code	data	Actuat.		
GIM		err. code	data	Actuat.		

ROVER MG TF

Petrol Engine	Info	err. code	data	Actuat.	1.Reset adaptions	
K SERIES 1.8 CVT AUTO	Info	err. code	data			
Diesel DDE model 1	Info	err. code	data			
Diesel DDE model 2	Info	err. code	data	Actuat.		
Auto gear Box	Info	err. code	data			
ABS	Info	err. code				
SRS	Info	err. code				
SCU Security	Info		data		1.EKA display	
Lights	Info		data	Actuat.		
Windows	Info		data	Actuat.		

Wash wipe	<i>Info</i>		<i>data</i>	<i>Actuat.</i>		
EPAS		<i>err. code</i>	<i>data</i>			
ROVER MG ZR						
Petrol Mems3	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Reset adaptions	
Diesel Engine	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
ABS	<i>Info</i>	<i>err. code</i>				
MRS3 SRS	<i>Info</i>	<i>err. code</i>				
ACU3 SRS	<i>Info</i>	<i>err. code</i>				
SCU Security	<i>Info</i>		<i>data</i>		1.EKA display	
Lights	<i>Info</i>		<i>data</i>	<i>Actuat.</i>		
Windows	<i>Info</i>		<i>data</i>	<i>Actuat.</i>		
Wash wipe	<i>Info</i>		<i>data</i>	<i>Actuat.</i>		
ROVER MG ZS						
Petrol Engine	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Reset adaptions	
Petrol EMS2000 model 1	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Reset adaptions	
Petrol EMS2000 model 2	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Reset adaptions	
Diesel EDC15M	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
Auto gear Box model 1	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
Auto gear Box model 2	<i>Info</i>	<i>err. code</i>	<i>data</i>			
ABS	<i>Info</i>	<i>err. code</i>				
MRS3 SRS	<i>Info</i>	<i>err. code</i>				
ACU3 SRS	<i>Info</i>	<i>err. code</i>				
SCU Security	<i>Info</i>		<i>data</i>		1.EKA display	
Lights	<i>Info</i>		<i>data</i>	<i>Actuat.</i>		
Windows	<i>Info</i>		<i>data</i>	<i>Actuat.</i>		
Wash wipe	<i>Info</i>		<i>data</i>	<i>Actuat.</i>		
ROVER MGF (95-2000)						
Mems 1.9 K Series		<i>err. code</i>	<i>data</i>		1.ECM Options	
Mems3	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Reset adaptions	
ABS	<i>Info</i>	<i>err. code</i>				
SRS	<i>Info</i>	<i>err. code</i>				
EPAS		<i>err. code</i>	<i>data</i>			
ROVER MGF (2001)						
Mems 1.9 K Series		<i>err. code</i>	<i>data</i>		1.ECM Options	
Petrol Engine	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Reset adaptions	
ABS	<i>Info</i>	<i>err. code</i>				
SRS	<i>Info</i>	<i>err. code</i>				
EPAS		<i>err. code</i>	<i>data</i>			

ROVER 25 SRS

Petrol Mem3	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Reset adaptions	
Diesel Engine	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
ABS	<i>Info</i>	<i>err. code</i>				
MRS3 SRS	<i>Info</i>	<i>err. code</i>				
ACU3 SRS	<i>Info</i>	<i>err. code</i>				
SCU Security	<i>Info</i>		<i>data</i>		1.EKA display	
Lights	<i>Info</i>		<i>data</i>	<i>Actuat.</i>		
Windows	<i>Info</i>		<i>data</i>	<i>Actuat.</i>		
Wash wipe	<i>Info</i>		<i>data</i>	<i>Actuat.</i>		

ROVER 45

Petrol Engine	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Reset adaptions	
Petrol EMS2000 model 1	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Reset adaptions	
Petrol EMS2000 model 2	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Reset adaptions	
Diesel EDC15M	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
Auto gear Box model 1	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
Auto gear Box model 2	<i>Info</i>	<i>err. code</i>	<i>data</i>			
ABS	<i>Info</i>	<i>err. code</i>				
MRS3 SRS	<i>Info</i>	<i>err. code</i>				
ACU3 SRS	<i>Info</i>	<i>err. code</i>				
SCU Security	<i>Info</i>		<i>data</i>		1.EKA display	
Lights	<i>Info</i>		<i>data</i>	<i>Actuat.</i>		
Windows	<i>Info</i>		<i>data</i>	<i>Actuat.</i>		
Wash wipe	<i>Info</i>		<i>data</i>	<i>Actuat.</i>		

ROVER 75

Petrol Mem3	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Reset adaptions 2.Immobilisation Learn	
Petrol EMS2000 model 1	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Reset adaptions	
Petrol EMS2000 model 2	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Reset adaptions	
Diesel DDE4.0 model 1	<i>Info</i>	<i>err. code</i>	<i>data</i>			
Diesel DDE model 2	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Immobilisation Learn	
Diesel Engine	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
Auto gear Box model 1	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
Auto gear Box model 2	<i>Info</i>	<i>err. code</i>	<i>data</i>			
ABS	<i>Info</i>	<i>err. code</i>	<i>data</i>			
MG ZT/ZTT SRS	<i>Info</i>	<i>err. code</i>				
ROVER 75 SRS	<i>Info</i>	<i>err. code</i>				
MRS3 SRS	<i>Info</i>	<i>err. code</i>				

SECURITY	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Remote Handset Status,Remote Handset 2.Programming,Enable Remote 3.Handset,Disable Remote Handset
Interior Lights	<i>Info</i>		<i>data</i>	<i>Actuat.</i>	
Wash Wipe	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	
Exterior Lights	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	
Immobilizer	<i>Info</i>	<i>err. code</i>	<i>data</i>		1.Identify Key 2. Key Store 3.Key Programming
Air Conditioning model 1	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	
Air Conditioning model 2	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	
Heated Screen	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	
Instrument Pack	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Service Interval Reset
Electric windows	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	
Fuel burning heater	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	
PARKING AID	<i>Info</i>	<i>err. code</i>	<i>data</i>		
Rain sensor	<i>Info</i>	<i>err. code</i>	<i>data</i>		
CITY ROVER					
JCAI EMS Engine	<i>Info</i>	<i>err. code</i>	<i>data</i>		1.MIL Data 2.Oxygen Sensor Location
ABS		<i>err. code</i>			
SRS	<i>Info</i>	<i>err. code</i>	<i>data</i>		
ROVER CDV					
Petrol Mem3	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Reset adaptions
Diesel EDC15M	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	
ABS	<i>Info</i>	<i>err. code</i>			
SRS	<i>Info</i>	<i>err. code</i>			
ROVER 100					
MEMS 1.6 TBI		<i>err. code</i>	<i>data</i>		
MEMS 1.6 MPI		<i>err. code</i>	<i>data</i>		
MEMS 1.9 96.5 MY		<i>err. code</i>	<i>data</i>		1.ECM Options
ROVER 200					
Petrol K SERIES VI		<i>err. code</i>	<i>data</i>		
Petrol MEMS 1.6 KMPI		<i>err. code</i>	<i>data</i>		
MEMS 1.6 KTBI		<i>err. code</i>	<i>data</i>		

MEMS 1.6 T-SERIES		<i>err. code</i>	<i>data</i>			
MEMS 1.9 K MPI		<i>err. code</i>	<i>data</i>		1.ECM Options	
BOSCH ABS	<i>Info</i>	<i>err. code</i>				
SRS	<i>Info</i>	<i>err. code</i>				
NEW ROVER 200						
K SERIES VI		<i>err. code</i>	<i>data</i>			
Diesel L Series Bosch	<i>Info</i>	<i>err. code</i>	<i>data</i>			
MEMS 1.9 K MPI		<i>err. code</i>	<i>data</i>		1.ECM Options	
Bosch ABS	<i>Info</i>	<i>err. code</i>				
SRS	<i>Info</i>	<i>err. code</i>				
NEW ROVER 400						
Diesel L Series Bosch	<i>Info</i>	<i>err. code</i>	<i>data</i>			
MEMS 1.9 K MPI		<i>err. code</i>	<i>data</i>		1.ECM Options	
MEMS 1.9 T Series		<i>err. code</i>	<i>data</i>		1.ECM Options	
Bosch ABS	<i>Info</i>	<i>err. code</i>				
ROVER 600						
MEMS 1.9 T SERIES		<i>err. code</i>	<i>data</i>		1.ECM Options	
ABS 5.3	<i>Info</i>	<i>err. code</i>				
ABS 5.0	<i>Info</i>	<i>err. code</i>				
ROVER 800						
VM Diesel	<i>Info</i>	<i>err. code</i>	<i>data</i>			
MEMS 1.9 96MY		<i>err. code</i>	<i>data</i>		1.ECM Options	
Auto gear Box model 1	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
Auto gear Box model 2	<i>Info</i>	<i>err. code</i>	<i>data</i>			
Bosch ABS	<i>Info</i>	<i>err. code</i>				
ROVER METRO						
MEMS 1.6 TBI		<i>err. code</i>	<i>data</i>			
MEMS 1.6 MPI		<i>err. code</i>	<i>data</i>			
MEMS 1.9 96.5 MY		<i>err. code</i>	<i>data</i>		1.ECM Options	
ROVER Streetwise						
PETROL Engine	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Reset adaptions	
ABS	<i>Info</i>	<i>err. code</i>				
SRS	<i>Info</i>	<i>err. code</i>				
SECURITY	<i>Info</i>		<i>data</i>		1.EKA display	
Lights	<i>Info</i>		<i>data</i>	<i>Actuat.</i>		
Windows	<i>Info</i>		<i>data</i>	<i>Actuat.</i>		
Wash wipe	<i>Info</i>		<i>data</i>	<i>Actuat.</i>		

ROVER MG ZT / ZTT

Petrol Engine	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Reset adaptions	
Petrol EMS2000 model 1	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Reset adaptions	
Petrol EMS2000 model 2	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Reset adaptions	
Diesel DDE4.0 model 1	<i>Info</i>	<i>err. code</i>	<i>data</i>			
Diesel DDE model 2	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
Diesel Engine	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
Auto gear Box model 1	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
Auto gear Box model 2	<i>Info</i>	<i>err. code</i>	<i>data</i>			
ABS	<i>Info</i>	<i>err. code</i>	<i>data</i>			
MG ZT/ZTT SRS	<i>Info</i>	<i>err. code</i>				
ROVER 25 SRS	<i>Info</i>	<i>err. code</i>				
SECURITY	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
Interior Lights	<i>Info</i>		<i>data</i>	<i>Actuat.</i>		
Wash Wipe	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
Exterior Lights	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
Immobilizer	<i>Info</i>	<i>err. code</i>	<i>data</i>			
Air Conditioning model 1	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
Air Conditioning model 2	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
Heated Screen	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
Instrument Pack	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>	1.Service Interval Reset	
Electric windows	<i>Info</i>	<i>err. code</i>	<i>data</i>	<i>Actuat.</i>		
PARKING AID	<i>Info</i>	<i>err. code</i>	<i>data</i>			
Rain sensor	<i>Info</i>	<i>err. code</i>	<i>data</i>			