

Suzuki Ver.: 30.10

JAPAN

Vehicle	System	Type	Engine model	Year	Sys. Info.	Read-Clear code	Data stream	Actuation
ALTO	ENGINE	HA12S	F6A-NA	98.10 -- 00.12	<i>info</i>	<i>err.code</i>	<i>data</i>	
			F6A-TURBO	99.10 -- 00.12	<i>info</i>	<i>err.code</i>	<i>data</i>	
				98.10 -- 00.12	<i>info</i>	<i>err.code</i>	<i>data</i>	
		HA12V	F6A-NA	99.10 -- 00.12	<i>info</i>	<i>err.code</i>	<i>data</i>	
		HA22S	K6A-TURBO	98.10 -- 00.12	<i>info</i>	<i>err.code</i>	<i>data</i>	
					<i>info</i>	<i>err.code</i>	<i>data</i>	
			K6A-NA	98.10 -- 01.04	<i>info</i>	<i>err.code</i>	<i>data</i>	
			K6A-TURBO-VVT	98.10 -- 99.10	<i>info</i>	<i>err.code</i>	<i>data</i>	
			K6A-NA	98.10 -- 99.10	<i>info</i>	<i>err.code</i>	<i>data</i>	
				K6A-NA-VVT	99.10 -- 00.12	<i>info</i>	<i>err.code</i>	<i>data</i>
			<i>info</i>			<i>err.code</i>	<i>data</i>	
		HA23S	K6A-NA	00.12 --	<i>info</i>	<i>err.code</i>	<i>data</i>	<i>actuat.</i>
			K6A-NA-VVT	00.12 -- 02.04	<i>info</i>	<i>err.code</i>	<i>data</i>	<i>actuat.</i>
			K6A-NA	01.04 --	<i>info</i>	<i>err.code</i>	<i>data</i>	<i>actuat.</i>
	K6A-NA-VVT U-LEV		02.04 -- 03.06	<i>info</i>	<i>err.code</i>	<i>data</i>		
		<i>info</i>		<i>err.code</i>	<i>data</i>	<i>actuat.</i>		
	HA23V	K6A-NA	00.12 --	<i>info</i>	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	
		K6A-NA-VVT U-LEV	02.04 -- 03.06	<i>info</i>	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	
	<i>info</i>			<i>err.code</i>	<i>data</i>	<i>actuat.</i>		
	A/T	HA22S(Only)		99.10 -- 00.12	<i>info</i>	<i>err.code</i>	<i>data</i>	
				98.10 -- 99.10	<i>info</i>	<i>err.code</i>	<i>data</i>	
				99.05 -- 01.04	<i>info</i>	<i>err.code</i>	<i>data</i>	
				01.04 -- 01.06	<i>info</i>	<i>err.code</i>	<i>data</i>	
	ABS	HA12V		98.10 -- 00.12	<i>info</i>	<i>err.code</i>	<i>data</i>	
		HA12S		98.10 -- 01.04	<i>info</i>	<i>err.code</i>	<i>data</i>	
		HA22S		98.10 -- 01.04	<i>info</i>	<i>err.code</i>	<i>data</i>	
		HA23V		00.12 --	<i>info</i>	<i>err.code</i>	<i>data</i>	<i>actuat.</i>
		HA23S		00.12 --	<i>info</i>	<i>err.code</i>	<i>data</i>	<i>actuat.</i>
	SRS	HA12V		98.10 -- 00.12	<i>info</i>	<i>err.code</i>	<i>data</i>	
		HA12S		98.10 -- 01.04	<i>info</i>	<i>err.code</i>	<i>data</i>	
HA22S			98.10 -- 01.04	<i>info</i>	<i>err.code</i>	<i>data</i>		
HA23V			00.12 --	<i>info</i>	<i>err.code</i>	<i>data</i>		
HA23S			00.12 --	<i>info</i>	<i>err.code</i>	<i>data</i>		
JIMNY	ENGINE	JB23W	K6A-TURBO	98.10 -- 99.10	<i>info</i>	<i>err.code</i>	<i>data</i>	
				99.10 -- 02.01	<i>info</i>	<i>err.code</i>	<i>data</i>	
				02.01 --	<i>info</i>	<i>err.code</i>	<i>data</i>	<i>actuat.</i>
	A/T	JB23W		98.10 --	<i>info</i>	<i>err.code</i>	<i>data</i>	
	ABS	JB23W		98.10 -- 00.04	<i>info</i>	<i>err.code</i>	<i>data</i>	
				00.04 --	<i>info</i>	<i>err.code</i>	<i>data</i>	<i>actuat.</i>

	SRS	JB23W		98.10 --	info	err.code	data	
JIMNY WIDE	ENGINE	JB33W	G13B	98.01 -- 00.04	info	err.code	data	
		JB43W	M13A-NA-VVT	00.04 --	info	err.code	data	actuat.
	A/T	JB33W		98.01 -- 00.04	info	err.code	data	
		JB43W		00.04 --	info	err.code	data	
	ABS	JB33W		98.01 -- 00.04	info	err.code	data	
		JB43W		00.04 --	info	err.code	data	actuat.
	SRS	JB33W		98.10 -- 00.04	info	err.code	data	
		JB43W		00.04 --	info	err.code	data	
JIMNY 1300 SIERRA	ABS	JB32W		96.09 -- 98.01	info	err.code	data	
JIMNY 660	ABS			96.09 -- 98.10	info	err.code	data	
Kei	ENGINE	HN21S	K6A-TURBO	98.10 -- 01.04	info	err.code	data	
			K6A-TURBO	98.10 -- 01.04(4WD)	info	err.code	data	
			K6A-TURBO	98.10 -- 99.10(2WD)	info	err.code	data	
			K6A-NA	98.10 -- 99.03	info	err.code	data	
			K6A-NA-VVT	00.10 -- 01.04	info	err.code	data	actuat.
			K6A-TURBO-NS control	99.10 -- 01.04(2WD)	info	err.code	data	
			K6A-NA-VVT	00.10 -- 01.04	info	err.code	data	
		HN11S	F6A-TURBO	98.10 -- 01.04	info	err.code	data	
			F6A-TURBO	98.10 -- 99.10	info	err.code	data	
			F6A-TURBO	99.10 -- 01.04	info	err.code	data	
		HN12S	F6A-TURBO	01.04 -- 01.11	info	err.code	data	
			F6A-TURBO	01.04 -- 01.11	info	err.code	data	actuat.
			K6A-NA-VVT	01.04 -- 01.11	info	err.code	data	actuat.
			K6A-NA-VVT	01.04 -- 01.11	info	err.code	data	actuat.
			K6A-TURBO	01.04 -- 01.11	info	err.code	data	actuat.
			K6A-TURBO	01.04 -- 01.11(4WD)	info	err.code	data	actuat.
			K6A-TURBO-NS control	01.04 -- 01.11(2WD)	info	err.code	data	actuat.
			K6A-NA-VVT	01.11 -- 02.11	info	err.code	data	actuat.
			K6A-NA-VVT	01.11 -- 02.04	info	err.code	data	actuat.
		HN22S	K6A-M TURBO	01.11 --	info	err.code	data	actuat.
			K6A-TURBO	01.11 --	info	err.code	data	actuat.
			K6A-M TURBO	01.11 -- 03.05	info	err.code	data	actuat.
			K6A-TURBO	01.11 -- 03.05	info	err.code	data	actuat.
			K6A-TURBO anti-alip co	01.11 -- 03.05	info	err.code	data	actuat.
			K6A-NA-VVT U-LEV	02.04 -- 03.06(2WD)	info	err.code	data	actuat.
			K6A-NA-VVT U-LEV	02.11 --(2WD)	info	err.code	data	actuat.

			K6A-M TURBO	03.05 --	<i>info</i>	<i>err.code</i>	<i>data</i>	<i>actuat.</i>
			K6A-TURBO	03.05 --	<i>info</i>	<i>err.code</i>	<i>data</i>	<i>actuat.</i>
			K6A-TURBO anti-alip control(2WD)	03.05 --	<i>info</i>	<i>err.code</i>	<i>data</i>	<i>actuat.</i>
			K6A-NA-VVT U-LEV	03.06 --(2WD)	<i>info</i>	<i>err.code</i>	<i>data</i>	<i>actuat.</i>
A/T	HN11S			99.03 -- 99.10	<i>info</i>	<i>err.code</i>	<i>data</i>	
ABS	HN11S			00.10 -- 01.04	<i>info</i>	<i>err.code</i>	<i>data</i>	<i>actuat.</i>
	HN21S			00.10 -- 01.04	<i>info</i>	<i>err.code</i>	<i>data</i>	<i>actuat.</i>
	HN12S			01.04 --	<i>info</i>	<i>err.code</i>	<i>data</i>	<i>actuat.</i>
	HN22S			01.04 --	<i>info</i>	<i>err.code</i>	<i>data</i>	<i>actuat.</i>
	HN11S			98.10 -- 00.10	<i>info</i>	<i>err.code</i>	<i>data</i>	
	HN21S			98.10 -- 00.10	<i>info</i>	<i>err.code</i>	<i>data</i>	
	HN22S			01.04 --	<i>info</i>	<i>err.code</i>	<i>data</i>	<i>actuat.</i>
SRS	HN11S			98.10 -- 01.04	<i>info</i>	<i>err.code</i>	<i>data</i>	
	HN21S			98.10 -- 01.04	<i>info</i>	<i>err.code</i>	<i>data</i>	
	HN12S			01.04 --	<i>info</i>	<i>err.code</i>	<i>data</i>	
	HN22S			01.04 --	<i>info</i>	<i>err.code</i>	<i>data</i>	
EMCD	HN22S			02.11 -- 03.03	<i>info</i>	<i>err.code</i>	<i>data</i>	
WAGON R	ENGINE	MC11S	F6A-NA	98.10 -- 99.10	<i>info</i>	<i>err.code</i>	<i>data</i>	
			F6A-TURBO	98.10 -- 00.12	<i>info</i>	<i>err.code</i>	<i>data</i>	
			F6A-TURBO	98.10 -- 00.12	<i>info</i>	<i>err.code</i>	<i>data</i>	
			F6A-TURBO	99.10 -- 00.12	<i>info</i>	<i>err.code</i>	<i>data</i>	
		MC21S	K6A-NA	98.10 -- 99.10	<i>info</i>	<i>err.code</i>	<i>data</i>	
			K6A-NA-VVT	98.10 -- 00.12	<i>info</i>	<i>err.code</i>	<i>data</i>	
			K6A-TURBO	98.10 -- 00.12	<i>info</i>	<i>err.code</i>	<i>data</i>	
			K6A-TURBO-NS control	98.10 -- 99.10	<i>info</i>	<i>err.code</i>	<i>data</i>	
			K6A-NA-VVT	99.04 -- 00.12	<i>info</i>	<i>err.code</i>	<i>data</i>	
			K6A-TURBO	99.10 -- 00.12	<i>info</i>	<i>err.code</i>	<i>data</i>	
			K6A-TURBO-NS control	99.10 -- 00.12	<i>info</i>	<i>err.code</i>	<i>data</i>	
			MC11S repit	F6A-NA-CNG	99.07 -- 01.03	<i>info</i>	<i>err.code</i>	<i>data</i>
		MC12S	F6A-TURBO	00.12 -- 01.11	<i>info</i>	<i>err.code</i>	<i>data</i>	
			F6A-TURBO	00.12 -- 01.11	<i>info</i>	<i>err.code</i>	<i>data</i>	<i>actuat.</i>
		MC22S	K6A-NA-VVT	00.12 -- 01.11	<i>info</i>	<i>err.code</i>	<i>data</i>	<i>actuat.</i>
			K6A-NA-VVT	00.12 -- 01.11	<i>info</i>	<i>err.code</i>	<i>data</i>	<i>actuat.</i>
			K6A-TURBO	00.12 -- 01.11	<i>info</i>	<i>err.code</i>	<i>data</i>	<i>actuat.</i>
			K6A-TURBO	00.12 -- 01.11(4WD)	<i>info</i>	<i>err.code</i>	<i>data</i>	<i>actuat.</i>
			K6A-TURBO-NS control	00.12 -- 01.11(2WD)	<i>info</i>	<i>err.code</i>	<i>data</i>	<i>actuat.</i>
			K6A-NA-VVT	01.11 --(4WD)	<i>info</i>	<i>err.code</i>	<i>data</i>	<i>actuat.</i>
			K6A-NA-VVT	01.11 -- 02.09(2WD)	<i>info</i>	<i>err.code</i>	<i>data</i>	<i>actuat.</i>

			K6A-NA-VVT	01.11 -- 03.06(4WD)	info	err.code	data	actuat.
			K6A-NA-VVT	01.11 -- 02.04(2WD)	info	err.code	data	actuat.
			K6A-M TURBO	01.11 -- 03.05	info	err.code	data	actuat.
			K6A-TURBO	01.11 -- 03.05	info	err.code	data	actuat.
			K6A-TURBO anti-alip co	01.11 -- 03.05	info	err.code	data	actuat.
			K6A-NA-VVT U-LEV	02.04 --(2WD)	info	err.code	data	actuat.
			K6A-NA-VVT U-LEV	02.04 -- 03.06(2WD)	info	err.code	data	actuat.
			K6A-NA-VVT U-LEV	02.09 --(2WD)	info	err.code	data	actuat.
			K6A-NA(VVT) U- LEV	02.09 --(2WD)	info	err.code	data	actuat.
			K6A-HEVanti-alip control additional locking function	02.09 --(2WD)	info	err.code	data	actuat.
			K6A-M TURBO	03.05 --	info	err.code	data	actuat.
			K6A-TURBO	03.05 --	info	err.code	data	actuat.
			K6A-TURBO anti-alip control(2WD)	03.05 --	info	err.code	data	actuat.
			K6A-NA-VVT	03.06 --(4WD)	info	err.code	data	actuat.
			K6A-NA-VVT U-LEV	03.06 --(2WD)	info	err.code	data	actuat.
		MC22S repite	K6A-NA-VVT-CNG	01.03 -- 03.05	info	err.code	data	actuat.
			K6A-NA-VVT-CNG	03.06 --	info	err.code	data	actuat.
	A/T	MC21S		98.10 -- 99.10	info	err.code	data	
				98.10 -- 01.06	info	err.code	data	
	ABS	MC11S		98.10 -- 00.12	info	err.code	data	
		MC21S		98.10 -- 00.12	info	err.code	data	
		MC12S		00.12 --	info	err.code	data	actuat.
		MC22S		00.12 --	info	err.code	data	actuat.
	SRS	MC11S		98.10 -- 00.12	info	err.code	data	
		MC21S		98.10 -- 00.12	info	err.code	data	
		MC12S		00.12 --	info	err.code	data	
		MC22S		00.12 --	info	err.code	data	
				01.05 --	info	err.code	data	
EVERY	ENGINE	DA52V	F6A-NA	99.01 -- 01.09	info	err.code	data	
			F6A-TURBO	99.01 -- 01.09	info	err.code	data	
			F6A-TURBO	99.01 -- 01.09	info	err.code	data	
		DB52V	F6A-NA	99.01 -- 01.09	info	err.code	data	
			F6A-TURBO	99.01 -- 01.09	info	err.code	data	
			F6A-TURBO	99.01 -- 01.09	info	err.code	data	
		DA52V repite	F6A-NA-CNG	99.12 -- 01.11	info	err.code	data	
		DA62V	K6A-NA	01.09 --	info	err.code	data	actuat.
			K6A-TURBO	01.09 --(MT)	info	err.code	data	actuat.

			K6A-TURBO	01.09 -- 03.06(AT)	<i>info</i>	<i>err.code</i>	<i>data</i>	<i>actuat.</i>
			K6A-TURBO	03.06 --(AT)	<i>info</i>	<i>err.code</i>	<i>data</i>	<i>actuat.</i>
		DA62V repit	K6A-NA-CNG	01.11 --	<i>info</i>	<i>err.code</i>	<i>data</i>	<i>actuat.</i>
			K6A-NA-CNG	01.11 --	<i>info</i>	<i>err.code</i>	<i>data</i>	<i>actuat.</i>
	A/T	DA52V		99.11 -- 01.09	<i>info</i>	<i>err.code</i>	<i>data</i>	
		DB52V		99.11 -- 01.09	<i>info</i>	<i>err.code</i>	<i>data</i>	
		DA62V		01.09 --	<i>info</i>	<i>err.code</i>	<i>data</i>	
	ABS	DA52V		99.11 -- 01.09	<i>info</i>	<i>err.code</i>	<i>data</i>	
		DB52V		99.11 -- 01.09	<i>info</i>	<i>err.code</i>	<i>data</i>	
		DA62V		01.09 --	<i>info</i>	<i>err.code</i>	<i>data</i>	<i>actuat.</i>
	SRS	DA52V	two seats airbag and	00.05 -- 01.09	<i>info</i>	<i>err.code</i>	<i>data</i>	
		DB52V	two seats pretensioner	00.05 -- 01.09	<i>info</i>	<i>err.code</i>	<i>data</i>	
		DA62V		01.09 --	<i>info</i>	<i>err.code</i>	<i>data</i>	
		DA52V	driver seat airbag	99.01 -- 00.05	<i>info</i>	<i>err.code</i>	<i>data</i>	
		DB52V	or two seats airbag	99.01 -- 00.05	<i>info</i>	<i>err.code</i>	<i>data</i>	
CARRY	ENGINE	DA52T	F6A-NA	99.01 -- 01.09	<i>info</i>	<i>err.code</i>	<i>data</i>	
			F6A-TURBO	99.01 -- 01.09	<i>info</i>	<i>err.code</i>	<i>data</i>	
					<i>info</i>	<i>err.code</i>	<i>data</i>	
		DB52T	F6A-NA	99.01 -- 01.09	<i>info</i>	<i>err.code</i>	<i>data</i>	
			F6A-TURBO	99.01 -- 01.09	<i>info</i>	<i>err.code</i>	<i>data</i>	
					<i>info</i>	<i>err.code</i>	<i>data</i>	
		DA62T	K6A-NA	01.09 -- 02.04	<i>info</i>	<i>err.code</i>	<i>data</i>	<i>actuat.</i>
			K6A-TURBO	01.09 -- 02.05	<i>info</i>	<i>err.code</i>	<i>data</i>	<i>actuat.</i>
		DA63T	K6A-NA	02.05 --	<i>info</i>	<i>err.code</i>	<i>data</i>	<i>actuat.</i>
	ABS	DA52T		00.05 -- 01.09	<i>info</i>	<i>err.code</i>	<i>data</i>	<i>actuat.</i>
		DB52T		00.05 -- 01.09	<i>info</i>	<i>err.code</i>	<i>data</i>	<i>actuat.</i>
	SRS	DA52T	two seats airbag and	00.05 -- 01.09	<i>info</i>	<i>err.code</i>	<i>data</i>	
		DB52T	two seats pretensioner	00.05 -- 01.09	<i>info</i>	<i>err.code</i>	<i>data</i>	
		DA62T		01.09 -- 02.04	<i>info</i>	<i>err.code</i>	<i>data</i>	
		DA63T		02.05 --	<i>info</i>	<i>err.code</i>	<i>data</i>	
		DA52T	driver seat airbag	99.01 -- 00.05	<i>info</i>	<i>err.code</i>	<i>data</i>	
		DB52T	or two seats airbag	99.01 -- 00.05	<i>info</i>	<i>err.code</i>	<i>data</i>	
EVERY WAGON	ENGINE	DA52W	F6A-TURBO	99.06 -- 01.09(MT)	<i>info</i>	<i>err.code</i>	<i>data</i>	
			F6A-TURBO	99.06 -- 01.09(3AT)	<i>info</i>	<i>err.code</i>	<i>data</i>	
		DA62W	K6A-NA	01.09 --	<i>info</i>	<i>err.code</i>	<i>data</i>	<i>actuat.</i>
			K6A-TURBO	01.09 --(MT)	<i>info</i>	<i>err.code</i>	<i>data</i>	<i>actuat.</i>
			K6A-TURBO	01.09 -- 03.06(AT)	<i>info</i>	<i>err.code</i>	<i>data</i>	<i>actuat.</i>
			K6A-TURBO	03.06 --(AT)	<i>info</i>	<i>err.code</i>	<i>data</i>	<i>actuat.</i>
	A/T	DA52W		99.11 -- 01.09	<i>info</i>	<i>err.code</i>	<i>data</i>	<i>actuat.</i>
		DA62W		01.09 --	<i>info</i>	<i>err.code</i>	<i>data</i>	<i>actuat.</i>
	ABS	DA52W		99.11 -- 01.09	<i>info</i>	<i>err.code</i>	<i>data</i>	

		DA62W		01.09 --	<i>info</i>	<i>err.code</i>	<i>data</i>	<i>actuat.</i>
MR WAGON	ENGINE	MF21S	K6A-NA-VVT	01.12 -- 03.06(4WD)	<i>info</i>	<i>err.code</i>	<i>data</i>	<i>actuat.</i>
			K6A-NA-VVT	01.12 -- 02.04(2WD)	<i>info</i>	<i>err.code</i>	<i>data</i>	<i>actuat.</i>
			K6A-M TURBO	01.12 -- 03.05	<i>info</i>	<i>err.code</i>	<i>data</i>	<i>actuat.</i>
			K6A-TURBO	02.06 -- 03.05	<i>info</i>	<i>err.code</i>	<i>data</i>	<i>actuat.</i>
			K6A-TURBO anti-alip control(2WD)	02.06 -- 03.05	<i>info</i>	<i>err.code</i>	<i>data</i>	<i>actuat.</i>
			K6A-NA-VVT U-LEV	02.04 --(2WD)	<i>info</i>	<i>err.code</i>	<i>data</i>	<i>actuat.</i>
			K6A-NA-VVT U-LEV	02.04 -- 03.06(2WD)	<i>info</i>	<i>err.code</i>	<i>data</i>	<i>actuat.</i>
			K6A-M TURBO	03.05 --	<i>info</i>	<i>err.code</i>	<i>data</i>	<i>actuat.</i>
			K6A-TURBO		<i>info</i>	<i>err.code</i>	<i>data</i>	<i>actuat.</i>
			K6A-TURBO anti-alip control(2WD)	03.05 --	<i>info</i>	<i>err.code</i>	<i>data</i>	<i>actuat.</i>
			K6A-NA-VVT	03.06 --(4WD)	<i>info</i>	<i>err.code</i>	<i>data</i>	<i>actuat.</i>
			K6A-NA-VVT U-LEV	03.06 --(2WD)	<i>info</i>	<i>err.code</i>	<i>data</i>	<i>actuat.</i>
			ABS	MF21S		01.12 --	<i>info</i>	<i>err.code</i>
SRS	MF21S	two seats airbag and two seats pretensioner	01.12 --	<i>info</i>	<i>err.code</i>	<i>data</i>		
		two seats airbag and two seats pretensioner and driver seat CRD	01.07 --	<i>info</i>	<i>err.code</i>	<i>data</i>		
LAPIN	ENGINE	HE21S	K6A-NA-VVT	02.01 -- 03.06(4WD)	<i>info</i>	<i>err.code</i>	<i>data</i>	<i>actuat.</i>
			K6A-NA-VVT	02.01 -- 02.04(2WD)	<i>info</i>	<i>err.code</i>	<i>data</i>	<i>actuat.</i>
			K6A-M TURBO	02.10 -- 03.05	<i>info</i>	<i>err.code</i>	<i>data</i>	<i>actuat.</i>
			K6A-NA-VVT U-LEV	02.04 --(2WD)	<i>info</i>	<i>err.code</i>	<i>data</i>	<i>actuat.</i>
			K6A-NA-VVT U-LEV	02.04 -- 03.06(2WD)	<i>info</i>	<i>err.code</i>	<i>data</i>	<i>actuat.</i>
			K6A-M TURBO	03.05 --	<i>info</i>	<i>err.code</i>	<i>data</i>	<i>actuat.</i>
			K6A-TURBO	03.05 --	<i>info</i>	<i>err.code</i>	<i>data</i>	<i>actuat.</i>
			K6A-NA-VVT	03.06 --(4WD)	<i>info</i>	<i>err.code</i>	<i>data</i>	<i>actuat.</i>
			K6A-NA-VVT U-LEV	03.06 --(2WD)	<i>info</i>	<i>err.code</i>	<i>data</i>	<i>actuat.</i>
			ABS	HE21S		02.01 --	<i>info</i>	<i>err.code</i>
SRS	HE21S		02.01 --	<i>info</i>	<i>err.code</i>	<i>data</i>	<i>actuat.</i>	
TWIN	ENGINE	FC225	K6A-NA-VVT U-LEV	03.01 --	<i>info</i>	<i>err.code</i>	<i>data</i>	<i>actuat.</i>

			K6A-NA(no VVT) U-LEV	03.01 --	<i>info</i>	<i>err.code</i>	<i>data</i>	<i>actuat.</i>
			K6A-HEV anti-alip control additional locking function	03.01 --	<i>info</i>	<i>err.code</i>	<i>data</i>	<i>actuat.</i>
		EC22S	K6A-NA-VVT U-LEV	03.01 --	<i>info</i>	<i>err.code</i>	<i>data</i>	<i>actuat.</i>
			K6A-NA(no VVT) U-LEV	03.01 --	<i>info</i>	<i>err.code</i>	<i>data</i>	<i>actuat.</i>
			K6A-HEV anti-alip control additional locking function	03.01 --	<i>info</i>	<i>err.code</i>	<i>data</i>	<i>actuat.</i>
	ABS	EC22S		03.01 --	<i>info</i>	<i>err.code</i>	<i>data</i>	<i>actuat.</i>
	SRS	EC22S		03.01 --	<i>info</i>	<i>err.code</i>	<i>data</i>	
ESCUDO	ENGINE	TA01W	G16A	96.02 -- 96.10	<i>info</i>	<i>err.code</i>	<i>data</i>	
				96.10 -- 97.11(OnlyMT)	<i>info</i>	<i>err.code</i>	<i>data</i>	
				96.10 -- 97.11(OnlyAT)	<i>info</i>	<i>err.code</i>	<i>data</i>	
		TA01R	G16A	96.02 -- 96.10	<i>info</i>	<i>err.code</i>	<i>data</i>	
				96.10 -- 97.11(OnlyMT)	<i>info</i>	<i>err.code</i>	<i>data</i>	
				96.10 -- 97.11(OnlyAT)	<i>info</i>	<i>err.code</i>	<i>data</i>	
		TD01W	G16A	96.02 -- 96.10	<i>info</i>	<i>err.code</i>	<i>data</i>	
				96.10 -- 97.11(OnlyMT)	<i>info</i>	<i>err.code</i>	<i>data</i>	
				96.10 -- 97.11(OnlyAT)	<i>info</i>	<i>err.code</i>	<i>data</i>	
		TA11W	H20A	96.02 -- 96.10(OnlyAT)	<i>info</i>	<i>err.code</i>	<i>data</i>	
				96.02 -- 96.10(OnlyAT)	<i>info</i>	<i>err.code</i>	<i>data</i>	
		TD11W	H20A	96.02 -- 96.10(OnlyAT)	<i>info</i>	<i>err.code</i>	<i>data</i>	
				96.02 -- 96.10(OnlyAT)	<i>info</i>	<i>err.code</i>	<i>data</i>	
		TA51W	J20A	96.10 -- 97.11(OnlyAT)	<i>info</i>	<i>err.code</i>	<i>data</i>	
				96.10 -- 97.11(OnlyAT)	<i>info</i>	<i>err.code</i>	<i>data</i>	
				97.11 -- 00.04	<i>info</i>	<i>err.code</i>	<i>data</i>	
		TD51W	J20A	96.10 -- 97.11(OnlyAT)	<i>info</i>	<i>err.code</i>	<i>data</i>	

				96.10 -- 97.11(OnlyAT)	info	err.code	data	
				97.11 -- 00.04	info	err.code	data	
	TD61W	H25A		96.10 -- 98.03	info	err.code	data	
				98.02 -- 00.04	info	err.code	data	
	TD62W	H25A		98.02 -- 00.04	info	err.code	data	
				00.04 --	info	err.code	data	actuat.
	TA02W	G16A		97.11 -- 00.04	info	err.code	data	
				00.04 -- 00.12	info	err.code	data	actuat.
	TD02W	G16A		97.11 -- 00.04	info	err.code	data	
	TD52W	J20A		97.11 -- 00.04	info	err.code	data	
	TA52W	J20A		00.12 -- 02.11	info	err.code	data	actuat.
	TL52W	J20A		00.04 --	info	err.code	data	actuat.
A/T	TA01W			96.02 -- 96.10	info	err.code	data	
	TA01R			96.02 -- 96.10	info	err.code	data	
	TD01W			96.02 -- 96.10	info	err.code	data	
	TA02W			00.04 -- 00.12	info	err.code	data	
	TA52W			00.12 -- 02.11	info	err.code	data	
	TL52W			00.04 --	info	err.code	data	
ABS	TA02W			00.04 -- 00.12	info	err.code	data	actuat.
	TA52W			00.12 -- 02.11	info	err.code	data	actuat.
	TL52W			00.04 --	info	err.code	data	actuat.
	TD62W			00.04 --	info	err.code	data	actuat.
SRS	all vehicles			97.11 -- 02.11	info	err.code	data	
	TL52W			02.11 --	info	err.code	data	
	TD62W			02.11 --	info	err.code	data	
A/C	TL52W			02.11 --	info	err.code	data	
	TD62W			02.11 --	info	err.code	data	
BCM	TL52W			02.11 -- 03.06	info	err.code	data	actuat.
	TD62W			02.11 -- 03.06	info	err.code	data	actuat.
	TL52W			03.06 --	info	err.code	data	actuat.
	TD62W			03.06 --	info	err.code	data	actuat.
X-90	ENGINE	LB11S	G16A	95.10 -- 97.11	info	err.code	data	
CULTUS CRECENT	ENGINE	GA11S	G13B	96.02 -- 97.05	info	err.code	data	
				97.05 -- 98.05(C	info	err.code	data	
				97.05 -- 98.05(3AT)	info	err.code	data	
		GC21S	G15A	96.02 -- 97.05	info	err.code	data	
		GC21W	G15A	96.02 -- 97.05	info	err.code	data	
		GD31S	G16A	96.02 -- 97.05	info	err.code	data	
		GD31W	G16A	96.02 -- 97.05	info	err.code	data	
		GB31S	G16A	96.02 -- 97.05	info	err.code	data	
		GC41W	J18A	96.02 -- 02.07	info	err.code	data	
		GA21S	G15A	97.05 -- 98.05	info	err.code	data	
	GB21S	G15A	97.05 -- 98.05	info	err.code	data		

		GC21S	G16A	97.05 -- 98.05	info	err.code	data	
		GD21S	G16A	97.05 -- 98.05	info	err.code	data	
	A/T	GB31S		96.02 -- 98.05	info	err.code	data	
		GC21S		96.02 -- 98.05	info	err.code	data	
		GD31S		96.02 -- 98.05	info	err.code	data	
		GC21W		96.02 -- 98.05	info	err.code	data	
		GD31W		96.02 -- 98.05	info	err.code	data	
		GC41W		96.02 -- 02.07	info	err.code	data	
		GA11S		96.10 -- 99.06	info	err.code	data	
				98.05 -- 99.06	info	err.code	data	
	ABS			96.02 -- 97.05	info	err.code	data	
				97.05 -- 00.04	info	err.code	data	
	EPS	GA11S		97.05 -- 00.04	info	err.code	data	
	SRS	all vehicles		97.05 -- 02.07	info	err.code	data	
CULTUS	ENGINE	GA11S	G13B	98.05 -- 00.04(only MT,CVT)	info	err.code	data	
				98.05 -- 00.04	info	err.code	data	
		GC21S	G15A	98.05 -- 01.10	info	err.code	data	
		GC21W	G15A	98.05 -- 02.07	info	err.code	data	
		GD31S	G16A	98.05 -- 01.10	info	err.code	data	
		GB31S	G16A	98.05 -- 01.10	info	err.code	data	
		GD31W	G16A	98.05 -- 02.07	info	err.code	data	
	A/T	GC21S		98.05 -- 01.10	info	err.code	data	
		GD31S		98.05 -- 01.10	info	err.code	data	
		GB31S		98.05 -- 01.10	info	err.code	data	
		GC21W		98.05 -- 02.07	info	err.code	data	
		GD31W		98.05 -- 02.07	info	err.code	data	
	ABS	GC21S		00.04 -- 01.10	info	err.code	data	actuat.
		GC21W		00.04 -- 02.07	info	err.code	data	actuat.
		GC41W		00.04 -- 02.07	info	err.code	data	actuat.
		GD31S		00.04 -- 01.10	info	err.code	data	actuat.
		GD31W		00.04 -- 02.07	info	err.code	data	actuat.
WAGON R WIDE	ENGINE	MA61S	K10A-NA TURBO	97.02 -- 99.05	info	err.code	data	
		MB61S	K10A-NA TURBO	97.02 -- 99.05	info	err.code	data	
	A/T	MA61S		97.02 -- 99.05	info	err.code	data	
				98.08 -- 99.05	info	err.code	data	
		MB61S		97.02 -- 99.05	info	err.code	data	
				98.08 -- 99.05	info	err.code	data	
	ABS	MA61S		97.02 -- 99.05	info	err.code	data	
		MB61S		97.02 -- 99.05	info	err.code	data	
	SRS	MA61S		97.02 -- 99.06	info	err.code	data	
		MB61S		97.02 -- 99.06	info	err.code	data	
EVERY+	ENGINE	DA32W	G13B	99.06 -- 01.05	info	err.code	data	
	A/T	DA32W		99.06 -- 01.05	info	err.code	data	

	ABS	DA32W`		99.06 -- 01.05	info	err.code	data	
	EPS	DA32W		99.06 -- 01.05	info	err.code	data	
	SRS	DA32W		99.06 -- 01.05	info	err.code	data	
SWIFT	ENGINE	HT51S	M13A-NA-VVT	00.01 -- 03.06	info	err.code	data	actuat.
				00.01 -- (4WD A	info	err.code	data	actuat.
		M13A-NA-VVT U-LEV	03.06 --(4WD,A	info	err.code	data	actuat.	
		HT81S	M15A-NA-VVT	03.06 --	info	err.code	data	actuat.
	A/T	HT51S		00.01 -- 01.04	info	err.code	data	
				01.04 --	info	err.code	data	
	ABS	HT51S		00.01 --	info	err.code	data	actuat.
	EPS	HT51S		00.01 --	info	err.code	data	
SRS	HT51S		00.01 --	info	err.code	data		
WAGON R SOLIO	ENGINE	MA34S	M13A-NA-VVT	00.11 --	info	err.code	data	actuat.
		MA64S	K10A-NA-VVT	00.11 -- 02.10	info	err.code	data	actuat.
	A/T	MA64S		00.11 -- 02.10	info	err.code	data	
		MA34S		00.11 --	info	err.code	data	
	ABS	MA34S		00.11 --	info	err.code	data	actuat.
		MA64S		00.11 -- 02.10	info	err.code	data	actuat.
	EPS	MA34S		00.11 --	info	err.code	data	
		MA64S		00.11 -- 02.10	info	err.code	data	
	SRS	MA34S		00.11 --	info	err.code	data	
		MA64S		00.11 -- 02.10	info	err.code	data	
GRAND ESCUDO	ENGINE	TX92W	H27A	00.12 -- 03.06	info	err.code	data	actuat.
			H27A U-LEV	03.06 --	info	err.code	data	actuat.
	A/T	TX92W		03.06 --	info	err.code	data	
	ABS	TX92W		00.12 --	info	err.code	data	actuat.
	SRS	TX92W		00.12 --	info	err.code	data	
	A/C	TX92W		02.11 --	info	err.code	data	
	BCM	TX92W		02.11 -- 03.06	info	err.code	data	actuat.
				03.06 --	info	err.code	data	
4WD	TX92W		03.06 --	info	err.code	data		
AERIO	ENGINE	RB21S	M15A-NA-VVT	01.01 --	info	err.code	data	actuat.
		RA21S	M15A-NA-VVT	01.11 --	info	err.code	data	actuat.
		RC51S	M18A-NA-VVT	03.01 --	info	err.code	data	actuat.
		RD51S	M18A-NA-VVT	03.01 --	info	err.code	data	actuat.
	A/T	RA21S		01.11 --	info	err.code	data	
		RB21S		01.11 --	info	err.code	data	
				01.01 -- 01.11	info	err.code	data	
		RC51S		03.01 --	info	err.code	data	
		RD51S		03.01 --	info	err.code	data	
	ABS	RB21S		01.01 --	info	err.code	data	actuat.
		RA21S		01.11 --	info	err.code	data	actuat.
		RC51S		03.01 --	info	err.code	data	actuat.
		RD51S		03.01 --	info	err.code	data	actuat.
	SRS	RB21S		01.01 --	info	err.code	data	
RA21S			01.11 --	info	err.code	data		

		RC51S		03.01 --	<i>info</i>	<i>err.code</i>	<i>data</i>	
		RD51S		03.01 --	<i>info</i>	<i>err.code</i>	<i>data</i>	
	A/C	RB21S		02.10 --	<i>info</i>	<i>err.code</i>	<i>data</i>	
		RA21S		02.10 --	<i>info</i>	<i>err.code</i>	<i>data</i>	
		RC51S		03.01 --	<i>info</i>	<i>err.code</i>	<i>data</i>	
		RD51S		03.01 --	<i>info</i>	<i>err.code</i>	<i>data</i>	
EVERY LANDY	ENGINE	DA32W	G13B	01.05 --	<i>info</i>	<i>err.code</i>	<i>data</i>	<i>actuat.</i>
	A/T	DA32W		01.05 --	<i>info</i>	<i>err.code</i>	<i>data</i>	
	ABS	DA32W		01.05 --	<i>info</i>	<i>err.code</i>	<i>data</i>	<i>actuat.</i>
	EPS	DA32W		01.05 --	<i>info</i>	<i>err.code</i>	<i>data</i>	
	SRS	DA32W		01.05 --	<i>info</i>	<i>err.code</i>	<i>data</i>	
CHEVROLET CRUZE	ENGINE	HR51S	M13A-NA-VVT	01.11 --	<i>info</i>	<i>err.code</i>	<i>data</i>	<i>actuat.</i>
		HR81S	M15A-NA-VVT	02.12 --	<i>info</i>	<i>err.code</i>	<i>data</i>	<i>actuat.</i>
	A/T	HR51S		01.11 --	<i>info</i>	<i>err.code</i>	<i>data</i>	
		HR81S		02.12 --	<i>info</i>	<i>err.code</i>	<i>data</i>	
	ABS	HR51S		01.11 --	<i>info</i>	<i>err.code</i>	<i>data</i>	<i>actuat.</i>
		HR81S		02.12 --	<i>info</i>	<i>err.code</i>	<i>data</i>	<i>actuat.</i>
	EPS	HR51S		01.11 --	<i>info</i>	<i>err.code</i>	<i>data</i>	
		HR81S		02.12 --	<i>info</i>	<i>err.code</i>	<i>data</i>	
	SRS	HR51S		01.11 --	<i>info</i>	<i>err.code</i>	<i>data</i>	
		HR81S		02.12 --	<i>info</i>	<i>err.code</i>	<i>data</i>	
	EMCD	HR51S		01.11 --	<i>info</i>	<i>err.code</i>	<i>data</i>	
WAGON R	ENGINE	MA63S	K10A-NA-VVT	99.05 -- 00.11	<i>info</i>	<i>err.code</i>	<i>data</i>	
			K10A-TURBO-VVT	99.05 -- 00.11	<i>info</i>	<i>err.code</i>	<i>data</i>	
	A/T	MA63S		99.05 -- 00.11	<i>info</i>	<i>err.code</i>	<i>data</i>	
	ABS	MA63S		99.05 -- 00.11	<i>info</i>	<i>err.code</i>	<i>data</i>	
	EPS	MA63S		99.05 -- 00.11	<i>info</i>	<i>err.code</i>	<i>data</i>	
	SRS	MA63S		99.05 -- 00.11	<i>info</i>	<i>err.code</i>	<i>data</i>	
ESCUDO 2.0,2.5, Diesel	ABS			96.02 -- 00.04	<i>info</i>	<i>err.code</i>	<i>data</i>	
ESCUDO 1.6	ABS			96.11 -- 00.04	<i>info</i>	<i>err.code</i>	<i>data</i>	
EVERY EV	EV	DA52V repit	EV MOTOR	99.08 --	<i>info</i>	<i>err.code</i>	<i>data</i>	
			EV A/C	99.08 --	<i>info</i>	<i>err.code</i>	<i>data</i>	
OTHER THAN NORTH AMERICA								
IGNIS	ENGINE					<i>err.code</i>	<i>data</i>	<i>actuat.</i>
	AT					<i>err.code</i>	<i>data</i>	
	ABS					<i>err.code</i>	<i>data</i>	<i>actuat.</i>
	SRS					<i>err.code</i>	<i>data</i>	
	EPS					<i>err.code</i>	<i>data</i>	
WAGON R+	ENGINE					<i>err.code</i>	<i>data</i>	<i>actuat.</i>
	AT					<i>err.code</i>	<i>data</i>	
	ABS					<i>err.code</i>	<i>data</i>	<i>actuat.</i>
	EPS					<i>err.code</i>	<i>data</i>	
	SRS					<i>err.code</i>	<i>data</i>	

SWIFT	ENGINE					<i>err.code</i>	<i>data</i>	
	AT					<i>err.code</i>	<i>data</i>	
	ABS					<i>err.code</i>	<i>data</i>	
	SRS					<i>err.code</i>	<i>data</i>	
	BCM					<i>err.code</i>	<i>data</i>	
(D)APV/CARRRY	ENGINE					<i>err.code</i>	<i>data</i>	
	AT							
	SRS					<i>err.code</i>	<i>data</i>	
ALTO	ENGINE					<i>err.code</i>	<i>data</i>	<i>actuat.</i>
	SRS					<i>err.code</i>	<i>data</i>	
JIMNY	ENGINE					<i>err.code</i>	<i>data</i>	<i>actuat.</i>
	AT					<i>err.code</i>	<i>data</i>	
	ABS					<i>err.code</i>	<i>data</i>	<i>actuat.</i>
MR WAGON	ENGINE							<i>actuat.</i>
	ABS					<i>err.code</i>	<i>data</i>	<i>actuat.</i>
	SRS					<i>err.code</i>	<i>data</i>	
EVERY+/LANDY	ENGINE					<i>err.code</i>	<i>data</i>	
	AT					<i>err.code</i>	<i>data</i>	
	ABS					<i>err.code</i>	<i>data</i>	
CARRY	ENGINE					<i>err.code</i>	<i>data</i>	
	AT					<i>err.code</i>	<i>data</i>	
	ABS					<i>err.code</i>	<i>data</i>	
SX4	ENGINE					<i>err.code</i>	<i>data</i>	<i>actuat.</i>
	AT					<i>err.code</i>	<i>data</i>	
	ABS					<i>err.code</i>	<i>data</i>	<i>actuat.</i>
	SRS					<i>err.code</i>	<i>data</i>	
	esp					<i>err.code</i>	<i>data</i>	<i>actuat.</i>
GRAND VITARA(JB Series)	ENGINE					<i>err.code</i>	<i>data</i>	<i>actuat.</i>
	AT					<i>err.code</i>	<i>data</i>	<i>actuat.</i>
	SRS					<i>err.code</i>	<i>data</i>	
	BCM					<i>err.code</i>		<i>actuat.</i>
	HVAC					<i>err.code</i>		
	ABS					<i>err.code</i>	<i>data</i>	<i>actuat.</i>
	4WD					<i>err.code</i>		
	ESP					<i>err.code</i>		<i>actuat.</i>
SAMURAI	ENGINE					<i>err.code</i>	<i>data</i>	
	ABS					<i>err.code</i>	<i>data</i>	
LIANA(AERIO)	ENGINE					<i>err.code</i>	<i>data</i>	
	AT					<i>err.code</i>	<i>data</i>	

	ABS					<i>err.code</i>	<i>data</i>	
	SRS					<i>err.code</i>	<i>data</i>	
	HVAC					<i>err.code</i>	<i>data</i>	
GRAND VITARA/XL -7	ENGINE					<i>err.code</i>	<i>data</i>	<i>actuat.</i>
	AT					<i>err.code</i>	<i>data</i>	
	SRS					<i>err.code</i>	<i>data</i>	
	BCM					<i>err.code</i>	<i>data</i>	<i>actuat.</i>
	HVAC					<i>err.code</i>	<i>data</i>	
	ABS					<i>err.code</i>	<i>data</i>	<i>actuat.</i>
	Immobiliz er					<i>err.code</i>		
	NORTH AMERICA							
VERONA	ENGINE			2004-2006		<i>err.code</i>	<i>data</i>	
	AT					<i>err.code</i>	<i>data</i>	
	ABS			2004-2006		<i>err.code</i>	<i>data</i>	
	SRS					<i>err.code</i>	<i>data</i>	
	ISU					<i>err.code</i>	<i>data</i>	
	SSPS					<i>err.code</i>		
	TPMS					<i>err.code</i>	<i>data</i>	
SWIFT	ENGINE			1996-2001		<i>err.code</i>		
ESTEEM	ENGINE			1996-2002		<i>err.code</i>		
	AT					<i>err.code</i>		
	AIR BAG					<i>err.code</i>		
	ABS			1996-2002		<i>err.code</i>		
FORENZA/ RENO	ENGINE			2004-2007		<i>err.code</i>		<i>actuat.</i>
	AT					<i>err.code</i>		<i>actuat.</i>
	ABS			2004-2007		<i>err.code</i>		
	SRS					<i>err.code</i>		
	TPMS					<i>err.code</i>	<i>data</i>	<i>actuat.</i>
	SSPS					<i>err.code</i>		
X-90	ENGINE			1996-1998		<i>err.code</i>		
AERIO	ENGINE			2002-2007		<i>err.code</i>		
	AT			2002-2007		<i>err.code</i>		
	SRS			2002-2007		<i>err.code</i>		
	HVAC			2003-2007		<i>err.code</i>		
	ABS			2002-2007		<i>err.code</i>		
SWIFT+	ENGINE			2004-2007		<i>err.code</i>		<i>actuat.</i>
	AT			2004-2007		<i>err.code</i>		<i>actuat.</i>
	ABS			2004-2007		<i>err.code</i>		<i>actuat.</i>
	SRS			2004-2007		<i>err.code</i>		
SX4	ENGINE					<i>err.code</i>	<i>data</i>	
	SRS					<i>err.code</i>	<i>data</i>	
	BCM					<i>err.code</i>	<i>data</i>	<i>actuat.</i>
	HVAC					<i>err.code</i>	<i>data</i>	
	ABS					<i>err.code</i>		
	4WD					<i>err.code</i>	<i>data</i>	
	ESP					<i>err.code</i>	<i>data</i>	

GRAND	ENGINE			2006-2007		<i>err.code</i>	<i>data</i>	<i>actuat.</i>
	AT					<i>err.code</i>		<i>actuat.</i>
	SRS					<i>err.code</i>		
	BCM					<i>err.code</i>		<i>actuat.</i>
VITARA(JB Series)	HVAC					<i>err.code</i>		
	ABS					<i>err.code</i>		<i>actuat.</i>
	4WD					<i>err.code</i>		
	ESP					<i>err.code</i>		<i>actuat.</i>
XL-7/GRAND VITARA/VITARA	ENGINE			1999-2006		<i>err.code</i>	<i>data</i>	<i>actuat.</i>
	AT			2007-2009	<i>info</i>	<i>err.code</i>	<i>data</i>	<i>actuat.</i>
	SRS			1999-2006		<i>err.code</i>	<i>data</i>	
	BCM			2003-2007-2009		<i>err.code</i>	<i>data</i>	<i>actuat.</i>
	HVAC					<i>err.code</i>	<i>data</i>	
	TPMS					<i>err.code</i>	<i>data</i>	<i>actuat.</i>
	ABS			1999-2006		<i>err.code</i>	<i>data</i>	
	4WD					<i>err.code</i>	<i>data</i>	<i>actuat.</i>
	DRR			2007-2009		<i>err.code</i>	<i>data</i>	<i>actuat.</i>
	HSM			2007-2009		<i>err.code</i>	<i>data</i>	<i>actuat.</i>
	IPC			2007-2009		<i>err.code</i>	<i>data</i>	<i>actuat.</i>
	PPS			2007-2009		<i>err.code</i>	<i>data</i>	<i>actuat.</i>
	TDM			2007-2009		<i>err.code</i>	<i>data</i>	<i>actuat.</i>
	EBCM			2007-2009		<i>err.code</i>	<i>data</i>	<i>actuat.</i>
	RFA			2009			<i>data</i>	<i>actuat.</i>
	SIR			2009	<i>info</i>	<i>err.code</i>	<i>data</i>	
VCS			2008	<i>info</i>	<i>err.code</i>			
SIDE KICK/SIDE	ENGINE			1996-1998		<i>err.code</i>		
	ABS					<i>err.code</i>		